

2006

EMAIL US

www.scion.com/contact/contact_main.html

CHAT

On weekdays you can chat with a Scion Customer Advocate.

www.scion.com/contact/contact_main.html

CALL US

For the Scion Customer Experience dial 1.866.70.SCION.



MAILING ADDRESS

Scion
19001 S. Western Ave.
D102, P.O. Box 2742
Torrance, CA 90509-2742
USA

OUR WEBSITE

www.scion.com



Scion tC

Pocket Reference Guide

©2005 Toyota Motor Sales, U.S.A., Inc.
00452-PRG06-TC

2006 SCION tC

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new SCION tC.

! A word about safe vehicle operations


This *Pocket Reference Guide* is not a full description of SCION tC operations. Every tC owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools

Tool location

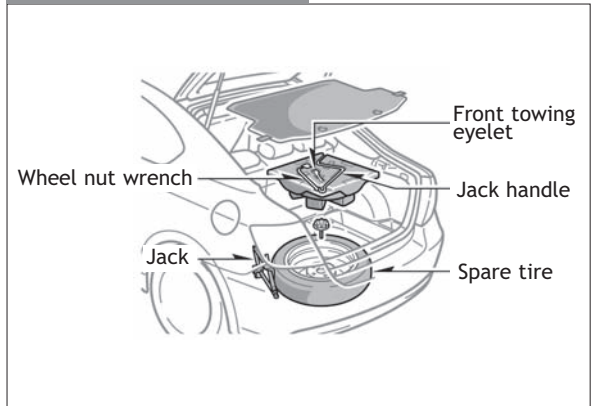

Removing the spare tire

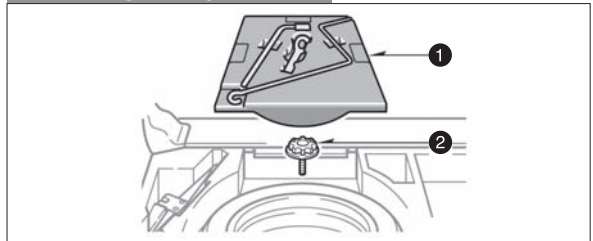

- ① Remove the spare tire cover.
- ② Loosen and remove the bolt.


Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door opener and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
FEATURES/OPERATIONS	
Air conditioning/Heating	14
Automatic transmission	8
AUX jack	15
Clock	14
Cruise control	10
Cup holders	14
Door locks	8
Light control-Instrument panel	13
Lights & turn signals	11
Panorama moonroof	12
Parking brake	8
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seats-Head restraints	9
Steering wheel switches	15
Tilt steering wheel	10
Windows	13
Windshield wiper & washer	12
SAFETY AND EMERGENCY FEATURES	
Seat belts	16
Spare tire & tools	17
Tire Pressure Warning System	16

OVERVIEW


Instrument panel

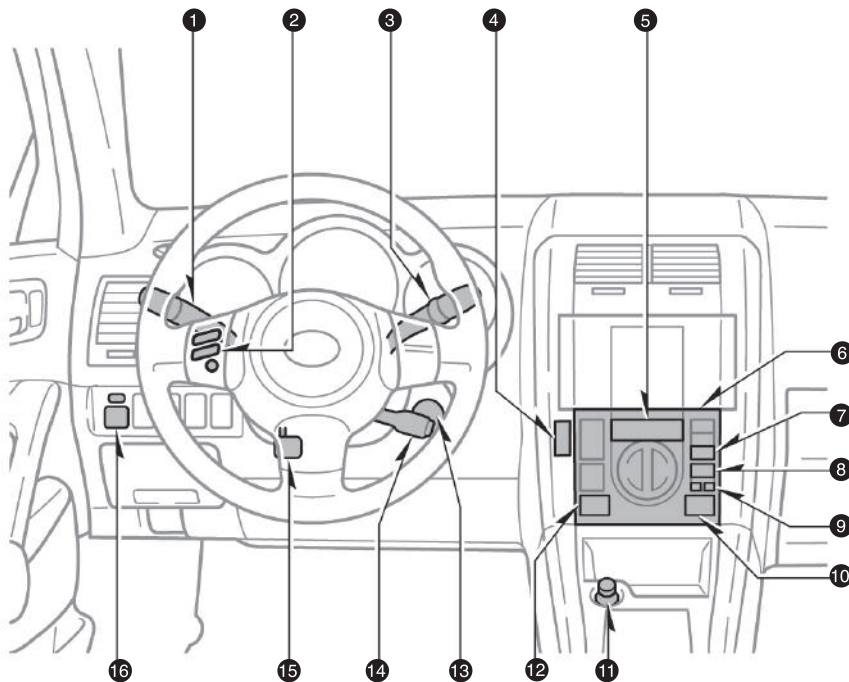

- ❶ Headlight and turn signal controls
- ❷ Steering wheel switches
- ❸ Wiper and washer controls
- ❹ Emergency flasher switch
- ❺ Clock, air conditioning and outside temperature display
- ❻ Air conditioning controls
- ❼ Rear window defogger switch
- ❽ Outside temperature display button

- ❾ Clock adjustment buttons
- ❿ Front passenger seat belt reminder light
- ⓫ Cigarette lighter
- ⓬ Engine immobilizer system indicator light
- ⓭ Ignition
- ⓮ Cruise control
- ⓯ Tilt steering lock release
- ⓰ Power rear view mirror controls

Instrument cluster

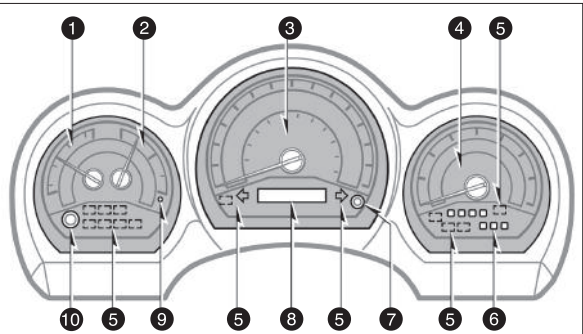

- 1 Engine coolant temperature
- 2 Fuel
- 3 Speedometer
- 4 Tachometer
- 5 Service reminder and indicator
- 6 Automatic transmission shift range position
- 7 Trip meter reset knob
- 8 Odometer and two trip meters
- 9 Low fuel level warning
- 10 Dimmer control knob

Indicator symbols

BRAKE	Brake system warning ¹
	Driver seat belt reminder ¹
PASSENGER	Front passenger seat belt reminder ¹
	Battery warning ¹
CHECK	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning ¹
	Airbag SRS warning ¹
	Low Tire Pressure Warning ¹

MAINT REQD	Engine oil replacement reminder ¹
	Turn signal indicators
	Headlight high beam indicator
CRUISE	Cruise control indicator ²
ABS	Anti-lock Brake System warning ¹


CAUTION


When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2006 Owner’s Manual.

² If this light flashes, refer to “Cruise control,” Section 1-7, 2006 Owner’s Manual.

Fuel tank door opener and cap

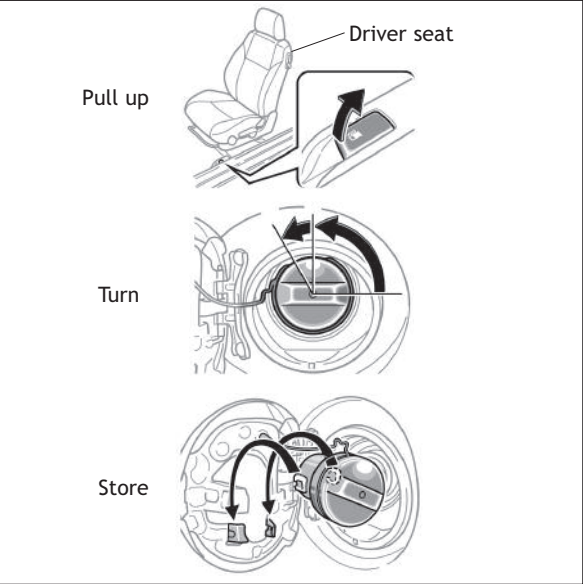

NOTE: If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Keyless entry

Locking operation

Push

Unlocking operation


Push ONCE: Driver door
TWICE: All doors

NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.


Alarm operation

Push

Hood release

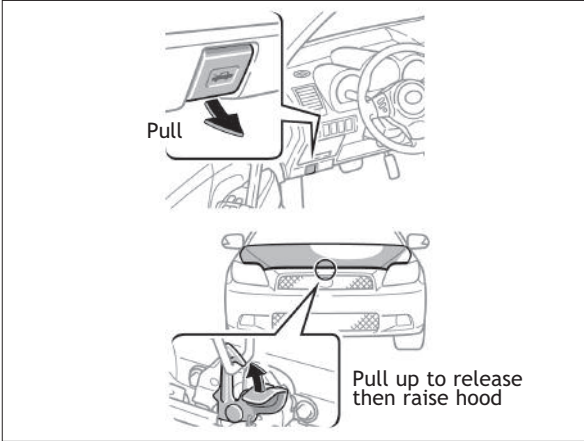

Engine maintenance

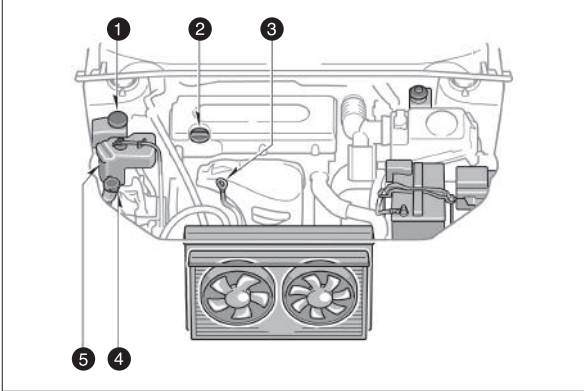

- 1 Power steering fluid reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank
- 5 Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS

Automatic transmission (if equipped)

P

Reverse

R

Reverse

N

Neutral

D

Drive

3


Third gear

2

Second gear

L

First gear

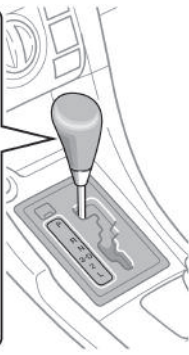

¹The ignition switch must be ON, and the brake pedal depressed.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Parking brake

BRAKE

Pull

Set

Release

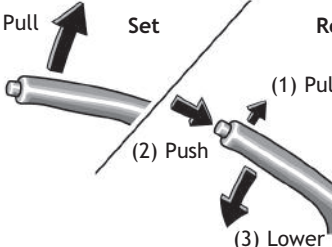


(1) Pull slightly

(2) Push

(3) Lower

Door locks

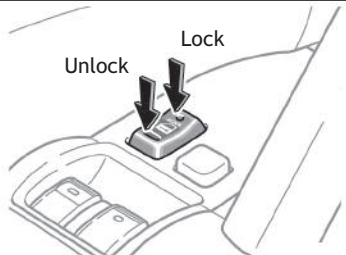


Seat adjustments-Front



- 1 Position
- 2 Cushion angle
- 3 Height crank (driver side only)
- 4 Seatback angle
- 5 Seatback lock release

Seat adjustments-Rear

Seatback/Angle adjusting lever*

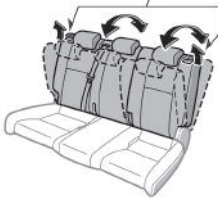


*Pull the lever up to adjust seatback angle, or fold down

Seats-Head restraints

Height

Front

Rear

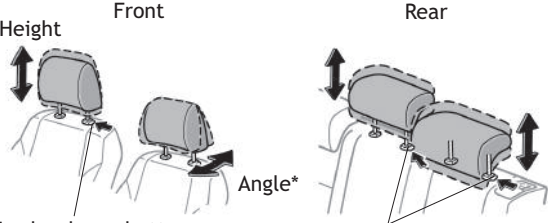


Lock release button

Lock release button

*Driver side only

Tilt steering wheel

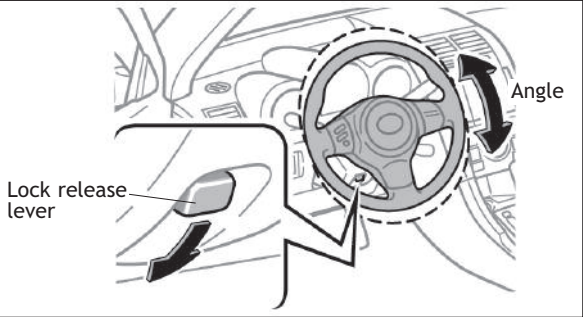


Hold wheel, push lever down, set angle then return lever.


Note: Do not attempt to adjust while the vehicle is in motion.

Cruise control

Turning system ON/OFF

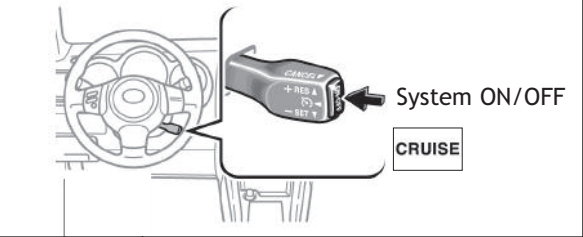

Functions

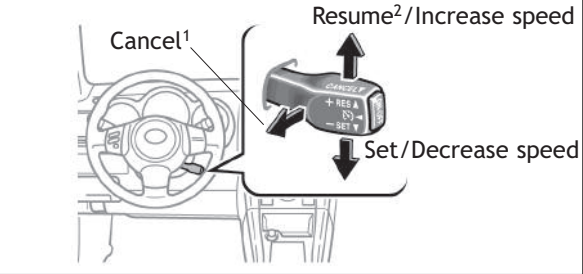


¹ The set speed may also be cancelled by depressing the brake pedal or pushing ON/OFF.

² If vehicle speed falls below 25 mph, the set speed will not resume.

Lights & turn signals


Headlights

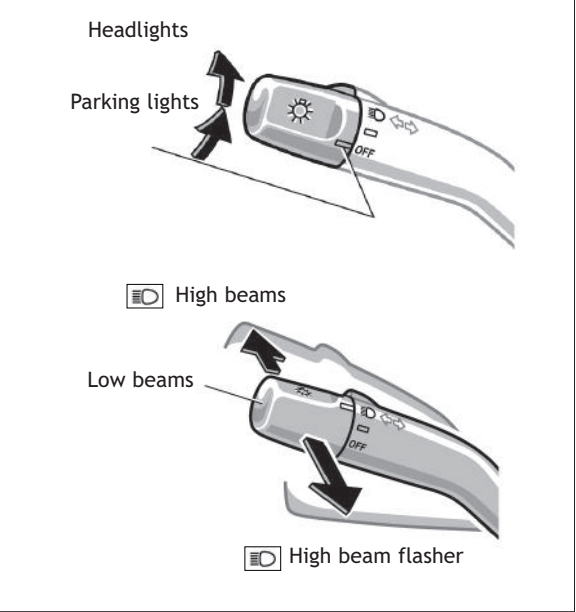


-Automatic light cutoff system Automatically turns lights off when driver's door is opened with the engine off.

-Daytime Running Light system Automatically turns on the headlights at a reduced intensity.


Turn signals

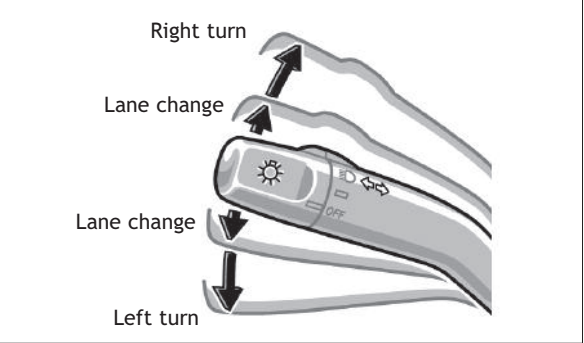

Windshield wiper & washer

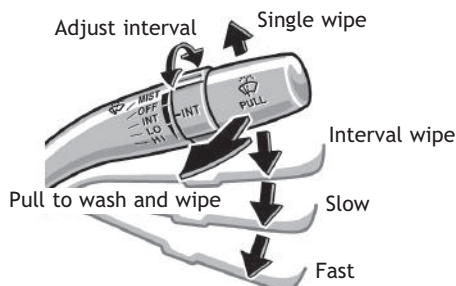


Panorama moonroof

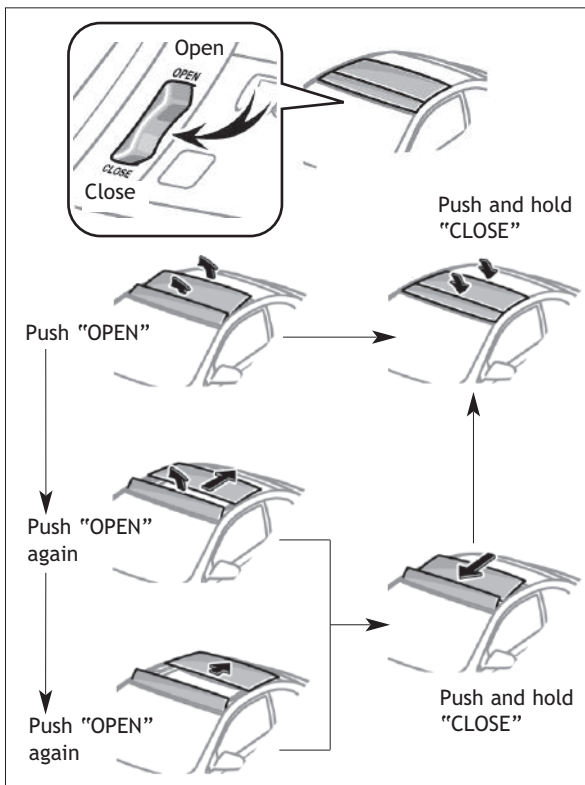

NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Windows

Driver side

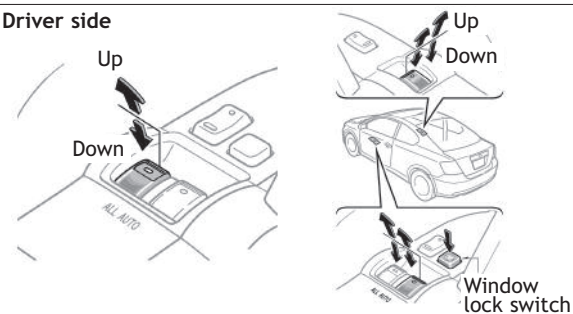


Window operation


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window mid-way, lightly push the switch in the opposite direction.

NOTE: If battery is disconnected, the windows need to be reinitialized. Refer to the *Owner's Manual* for more details.

Light control-Instrument panel

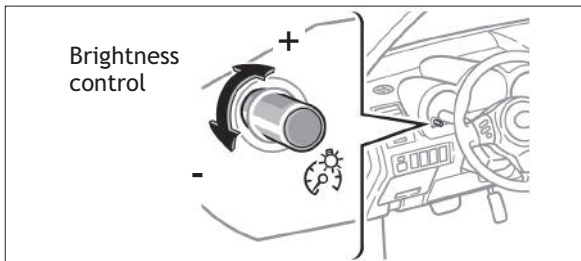


Power outlet

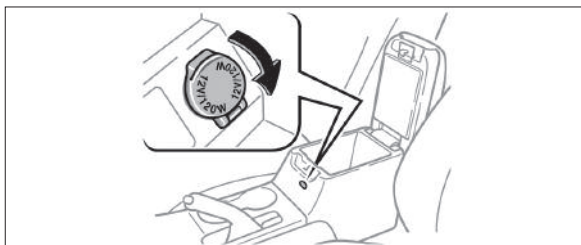

Designed for car accessories. Key must be in the "ACC" or "ON" position to be used.


Air conditioning/Heating

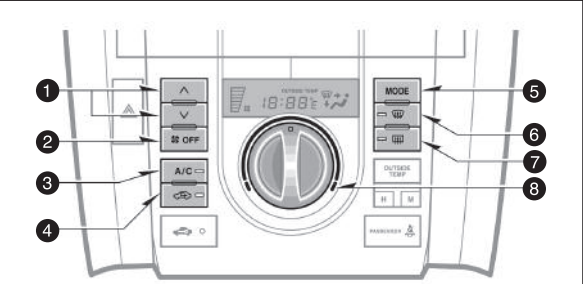

1 Fan speed
2 Climate control OFF
3 Air Conditioning ON/OFF
4 Fresh or recirculate cabin air
5 Vent selector¹
6 Windshield air flow
7 Rear defogger
8 Temperature

¹ “” or “”, use fresh air to reduce window fogging (“” indicator light “OFF”).


Clock

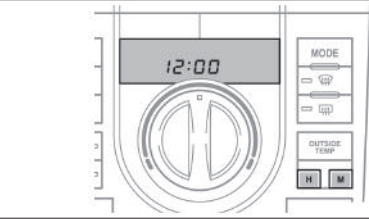


H-Set hour
M-Set minutes

Cup holders


Front

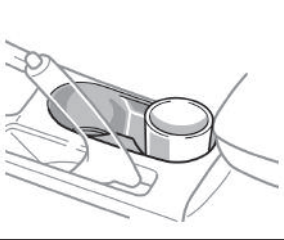

Rear

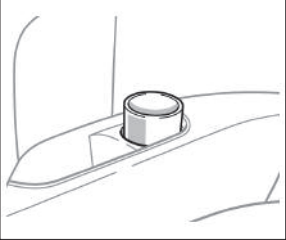


Steering wheel switches

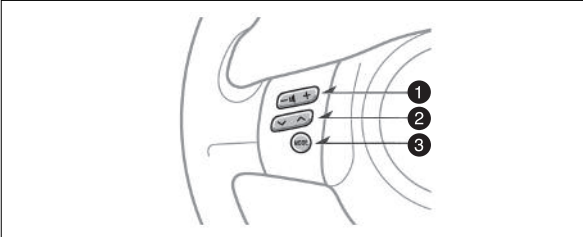

1 “- +”
Volume control
2 “V ^”
-In radio mode Push to select a preset station, push and hold to seek the next strong station.
-In tape mode Push to skip up or down to a next/previous track, push and hold to fast forward or reverse.
-In CD mode Push to skip up or down to a next/previous track.
3 “MODE”
Push to turn audio “ON” and select an audio mode. Push and hold to turn the audio system “OFF.”

Refer to the *SCION Audio System Owner’s Manual* for more details.


AUX jack

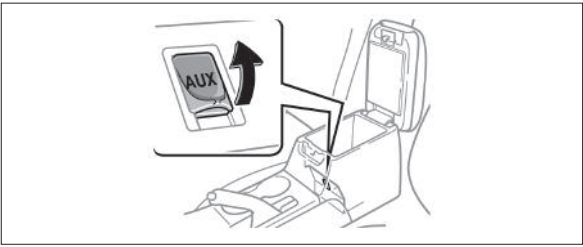

Refer to the *SCION Audio System Owner’s Manual* for more details.

SAFETY AND EMERGENCY FEATURES


Seat belts

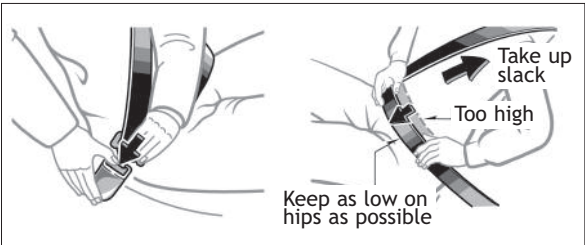

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Warning System

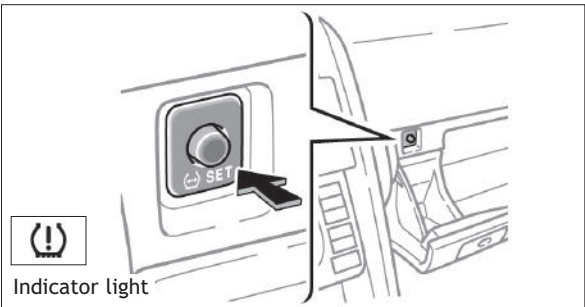

Designed to provide warning when tire pressure of any one of the tires is critically reduced while the vehicle is moving. It must be re-initialized by pushing and holding the " (tire icon) SET" button if indicator light remains ON or blinks, and/or after replacing or rotating tires or wheels.